


FIELD DRILL FOR VERTICAL DOWELS AS REQUIRED  
 BOLT OR WELD AS APPROPRIATE  
 EYE BOLT & DOWEL FASTNER  
 DOWEL CAN BE INSTALLED HORIZONTALLY OR VERTICALLY

DETAIL A

SCALE: 3" = 1'

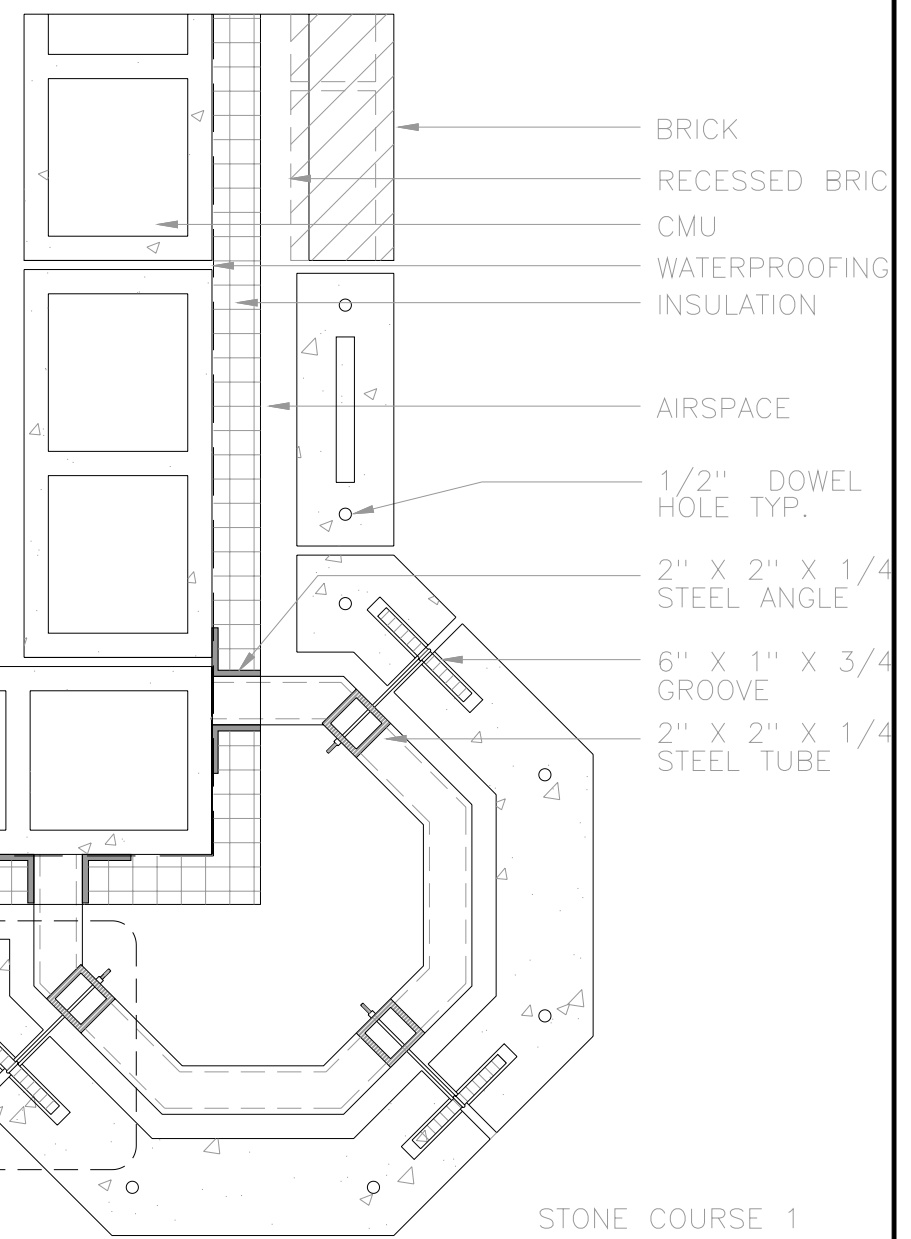

STONE COURSE 1

PROJECT:	REFERENCES:	ITEM TAG: P1-MTG-1
 <b>Stromberg Architectural Products</b> P.O. Box 8036, I-30 West, Greenville, TX 75404 (903) 454-8682 FAX (903) 454-3642	DRAWN BY: SCALE: 1 1/2" = 1'	DATE: DWG: P1_MTG_1 SHEET 1 OF 2